

Montageanleitung

Assembly instructions

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Инструкция для монтажа

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları


Navodilo za montažo

Montagehandleiding


A sen nus soh je

Upute o montaži


Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Железные оправы для мебели / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Obloge




11mm
12 x VB1




12 x VB14



5,0x35
12 x VB4




3,0x13
1 x WI 3




8 x AK3




2 x TB19




2 x TB8




3,5x15
20 x SP1




280
2 x SK4




4 x SO1



M4x8
2 x SG1

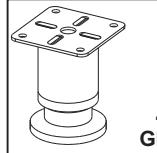

4 x
GI18




2 x
GR30




4 x SP8



4 x BT1



4 x ZB6



8,0x40
1 x VB9



1 x VB10



1 x ZB1



4 x
ZB 4



3,5x20
4 x SP3



2 x ZB7

Sie benötigen:

You need:

Vous avez besoin de:

Necesitas:

Le servono :

Вам нужно:

Potrebujete:

Tarvitset:

Potrzebne są:

Potrebujete:

Potrebujete:



Szükséges eszközök:

Ha Bac ca Ви нужны:

Ihtiyacınız:



U hebt nodig:

Trebate:

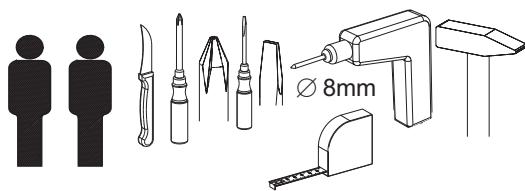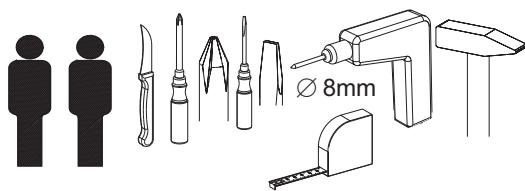


ZAMORA 2



Art.-Nr. 925-002

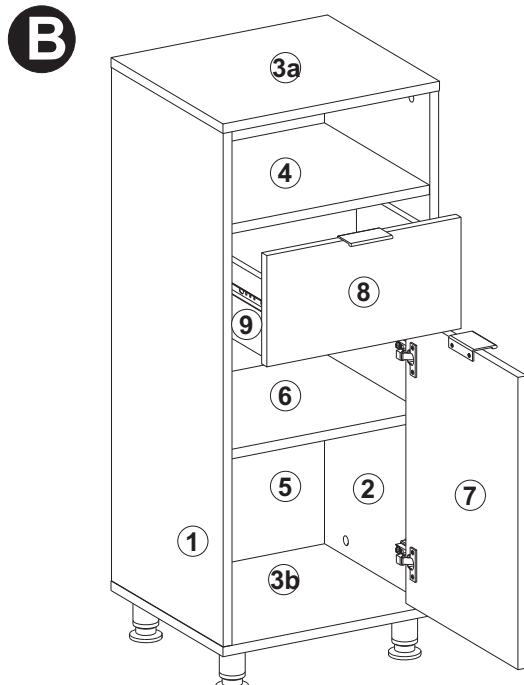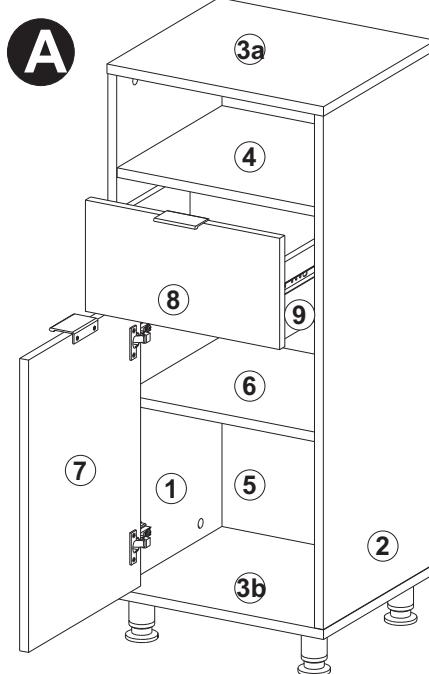




Teile / article / Pièces / Piezas / Pezzi / части / Części / Díly / Diely / Alkatrészek / части / parçalar / dele / Onderdelen / osat / Dijelovi

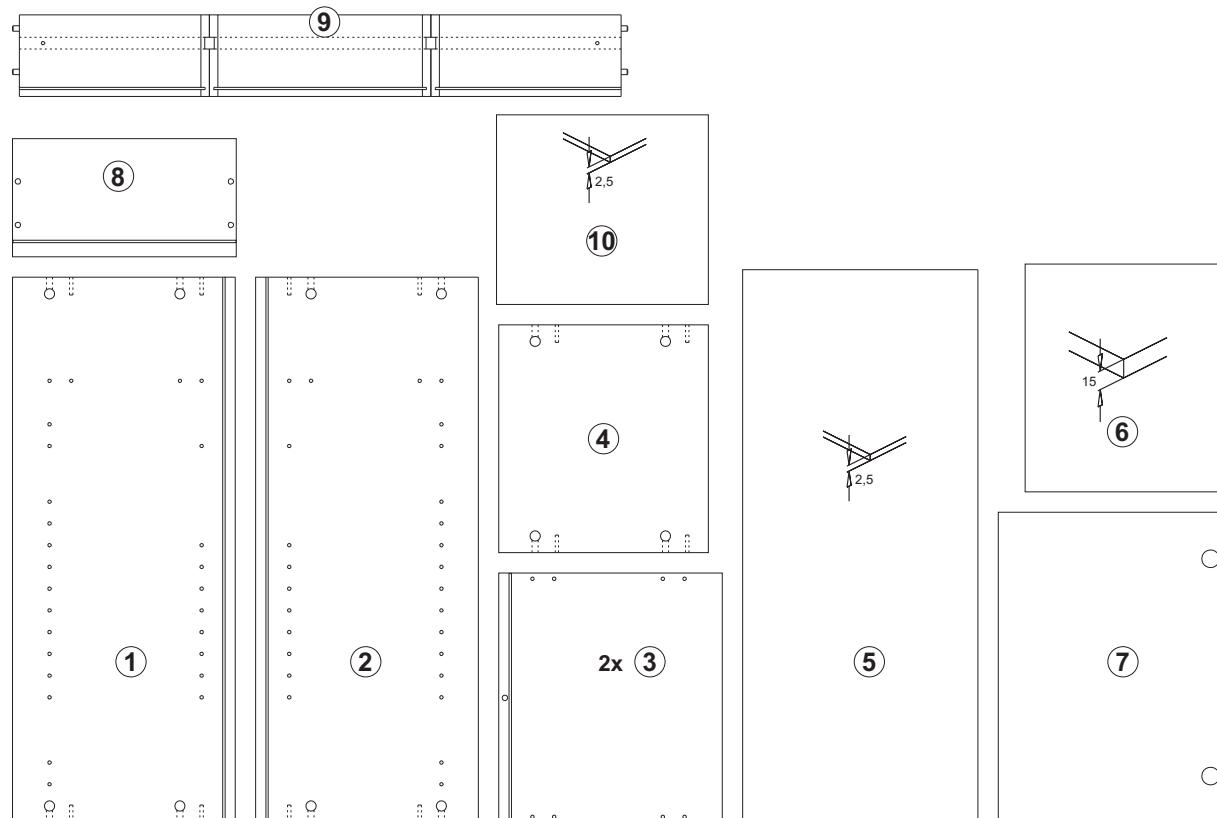






A




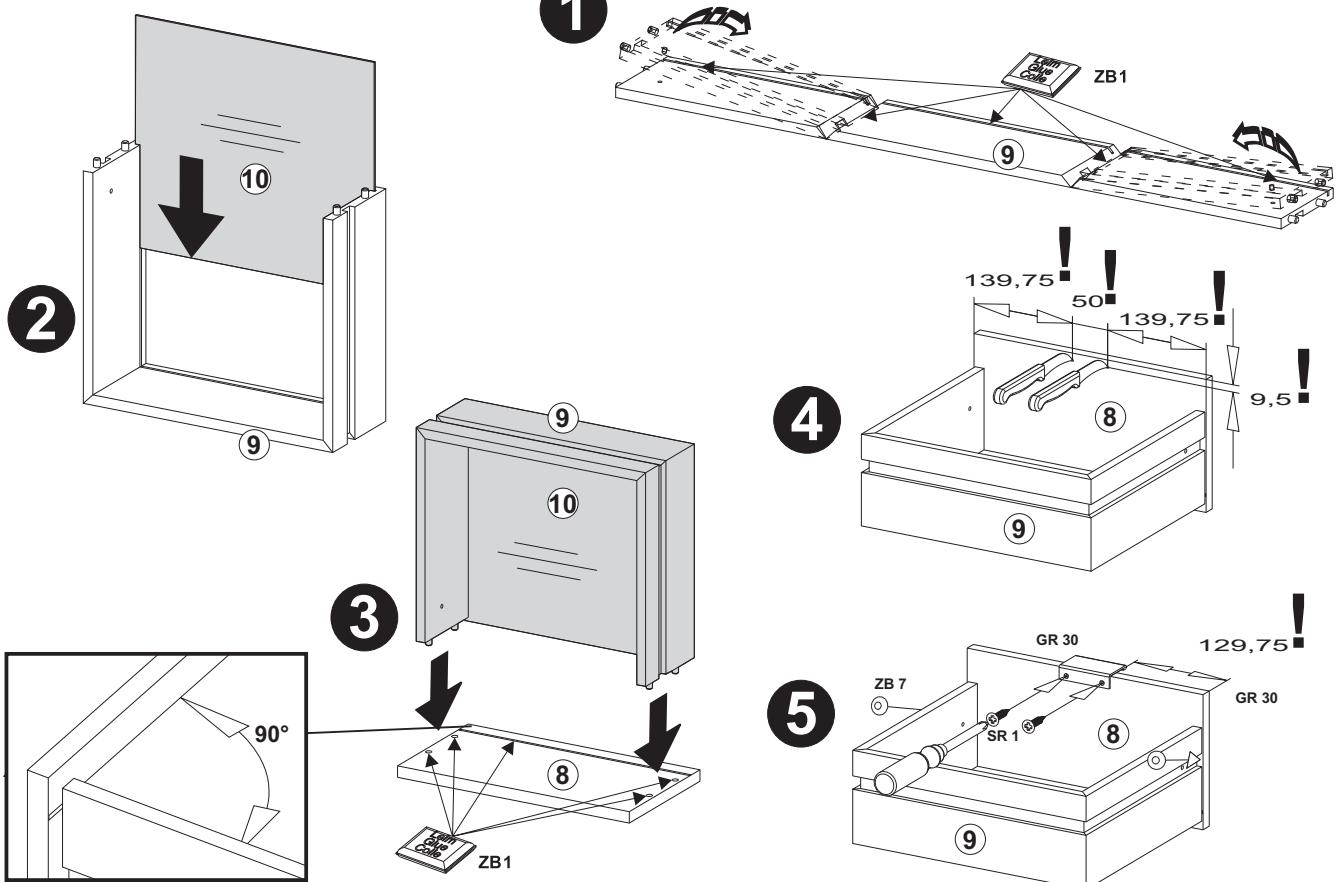



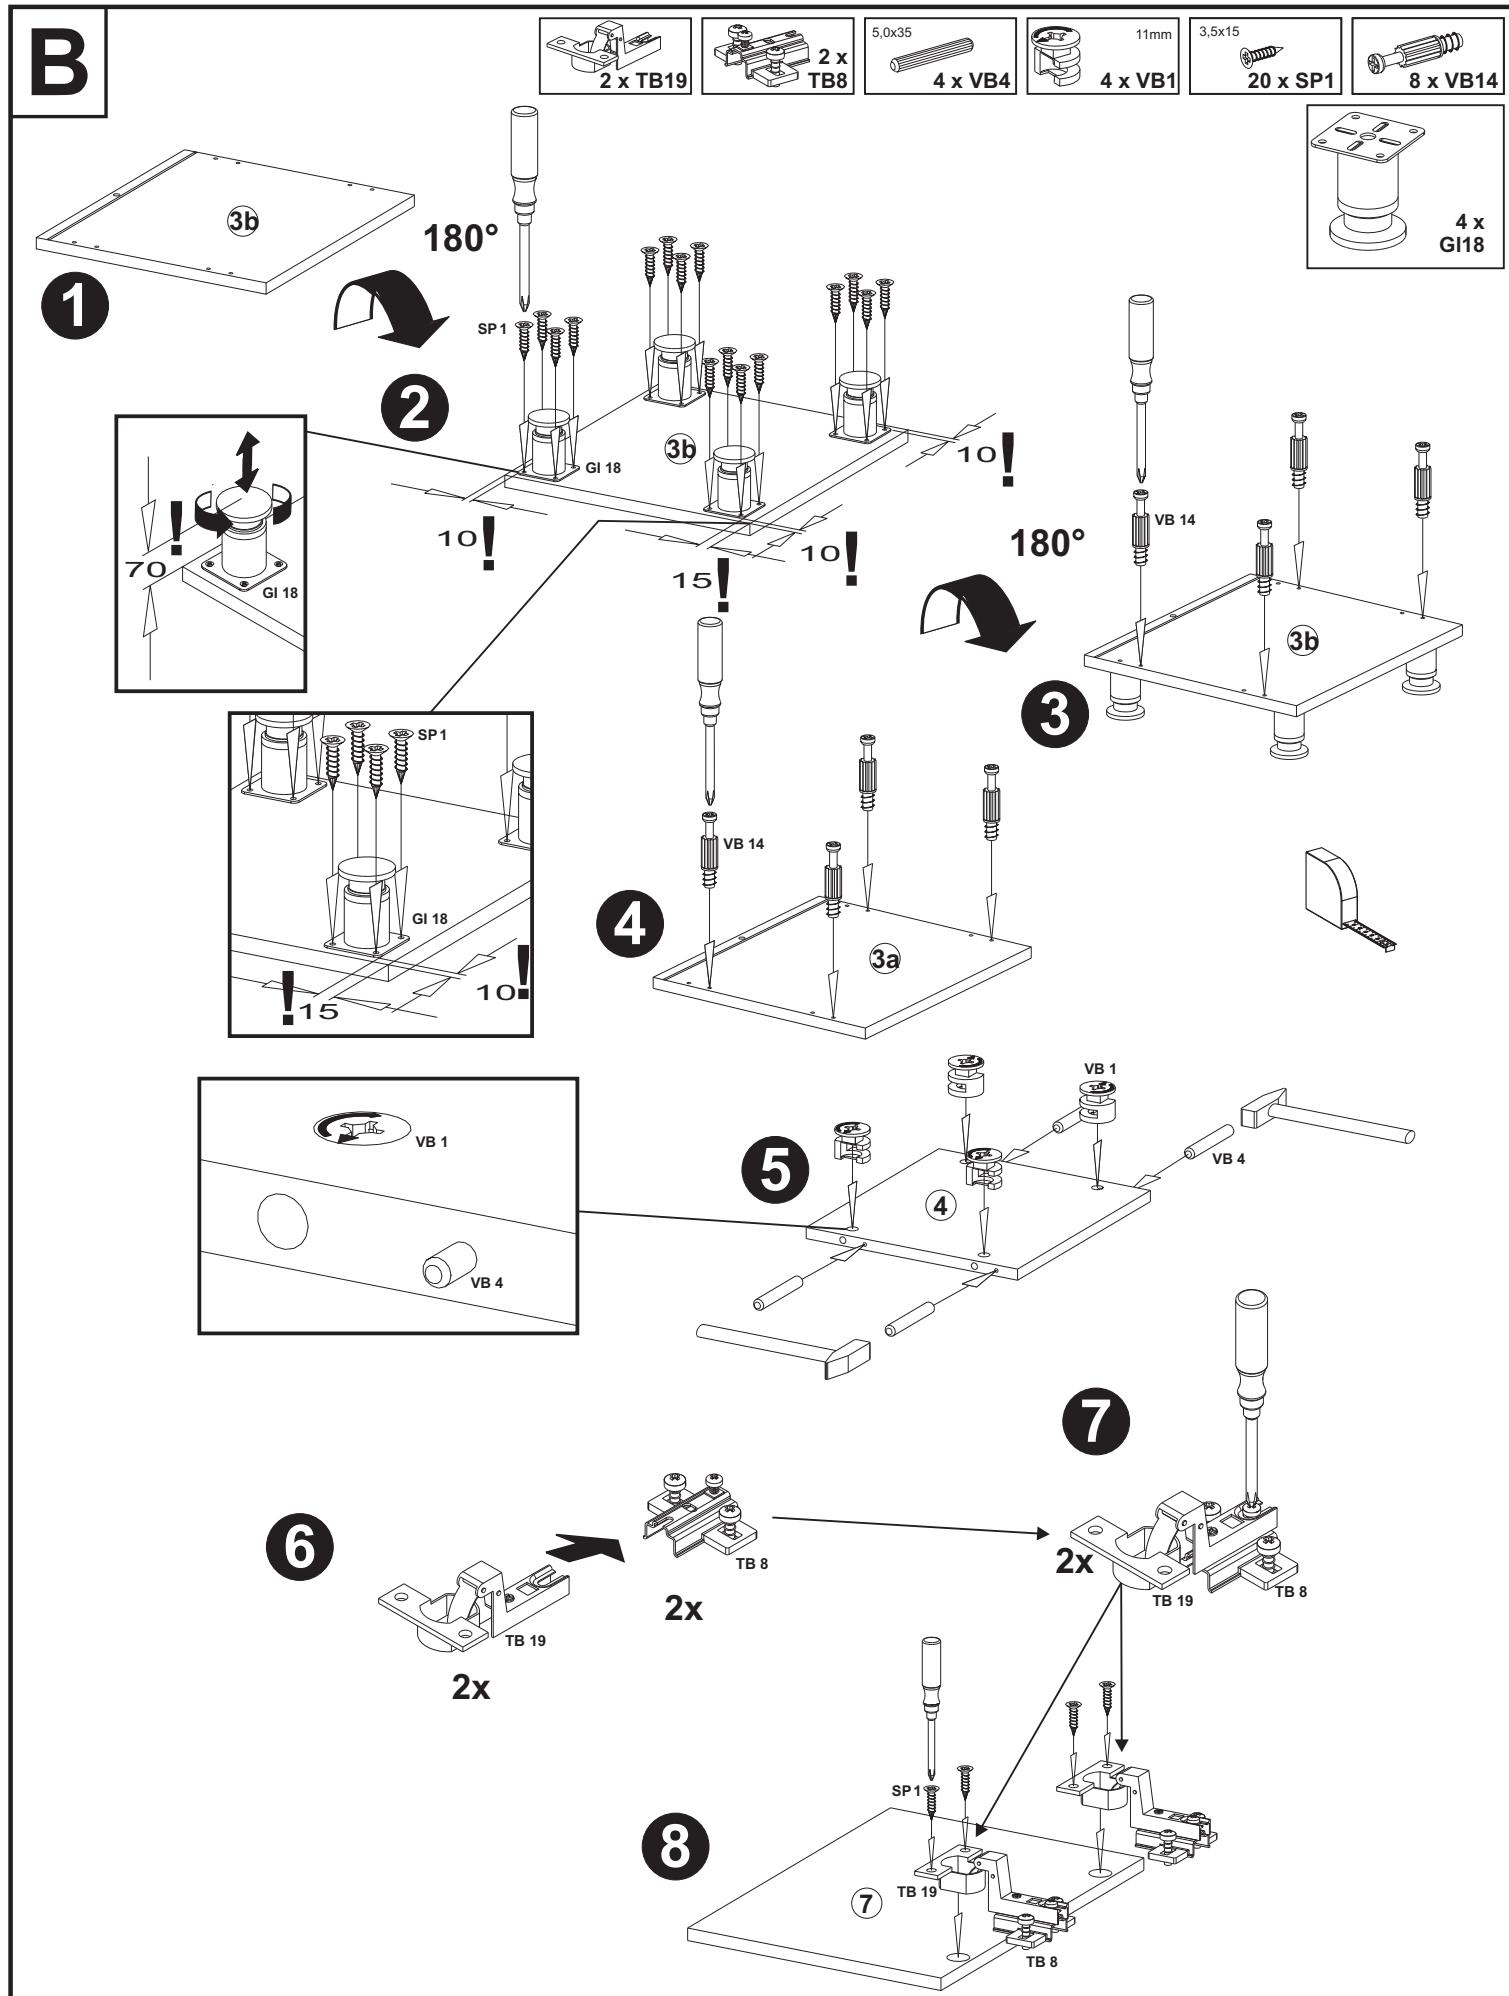







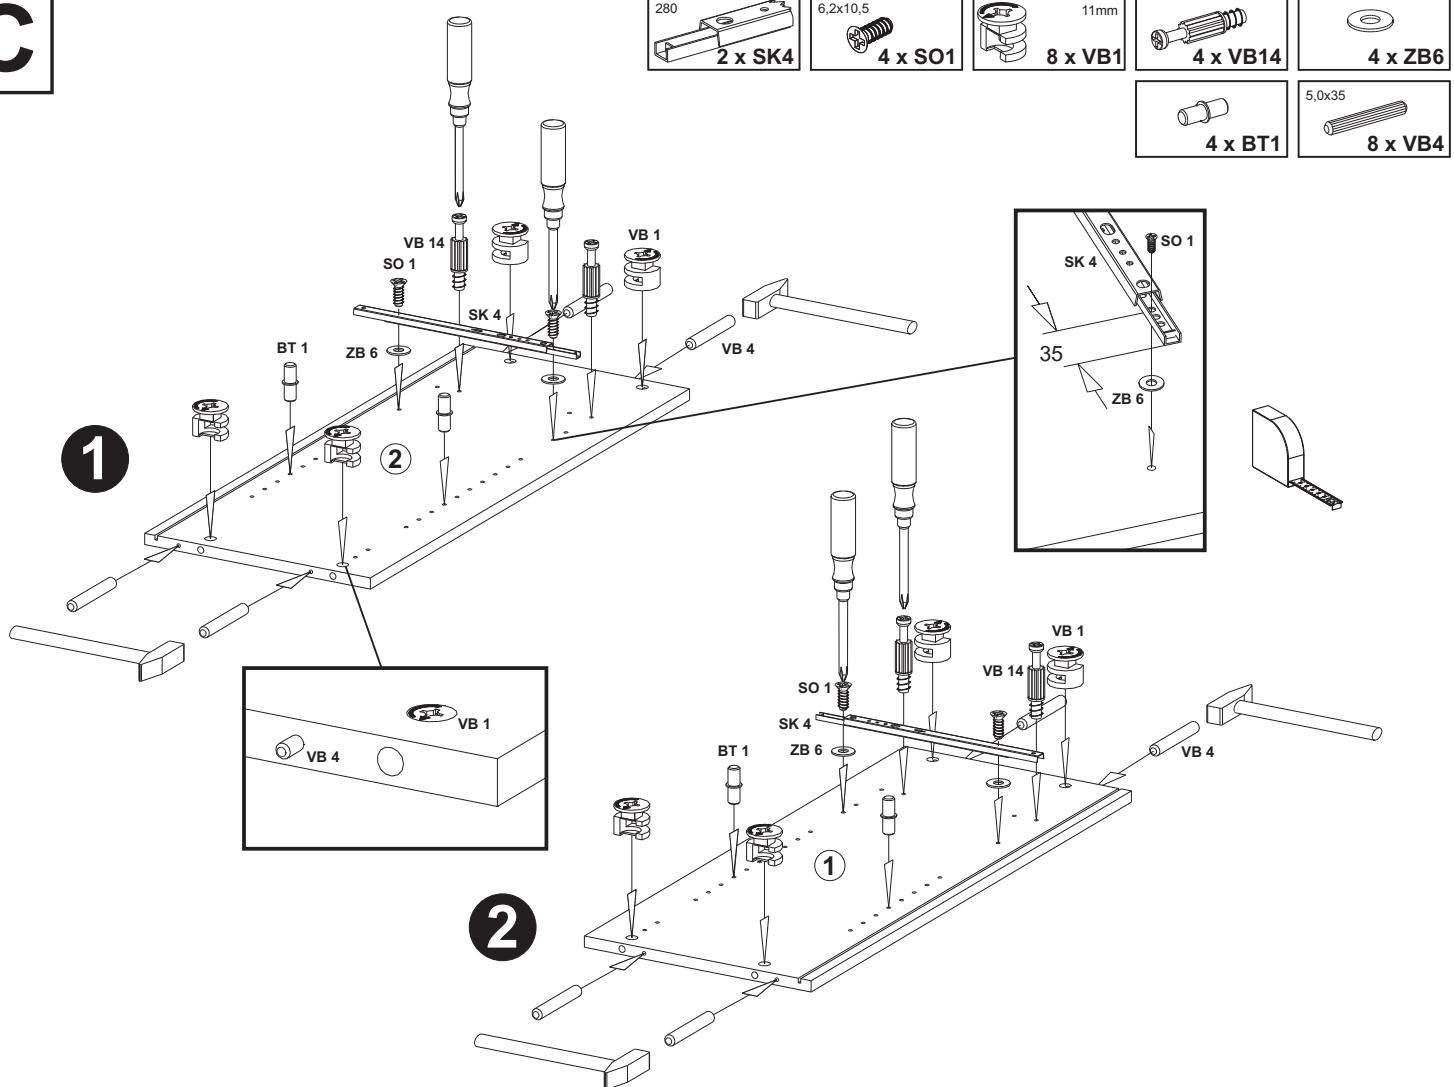
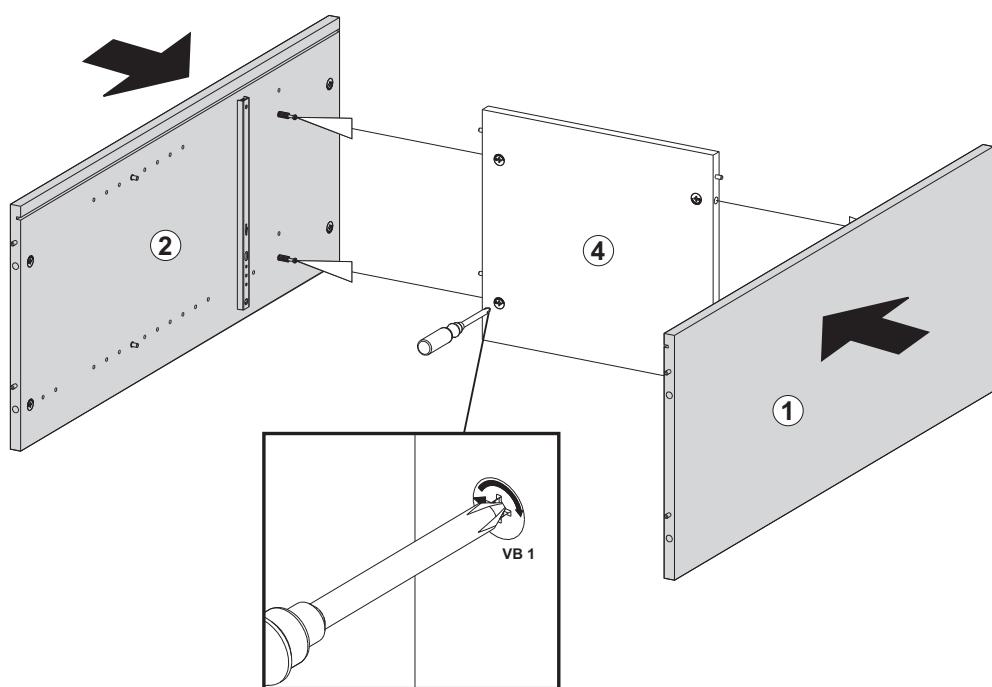
C**D**

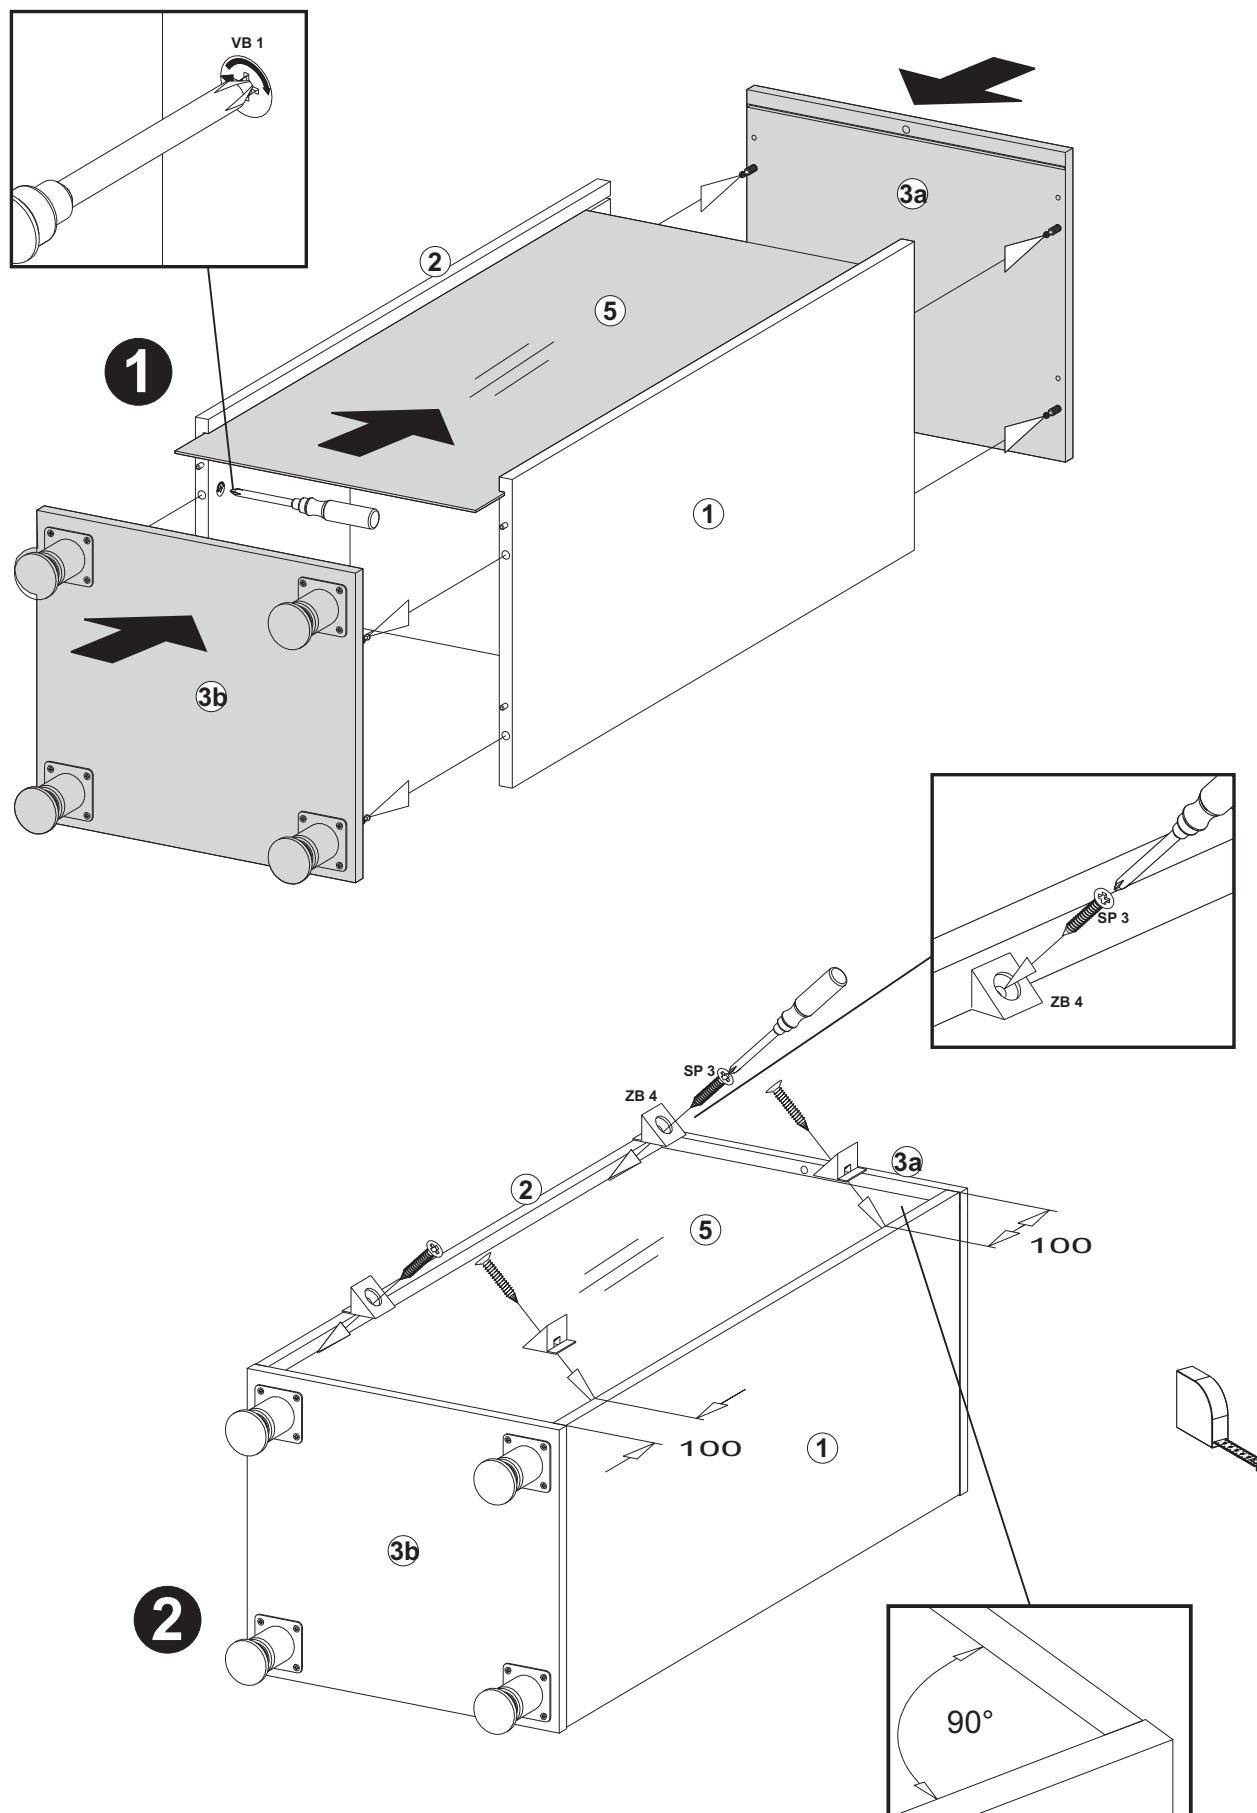E

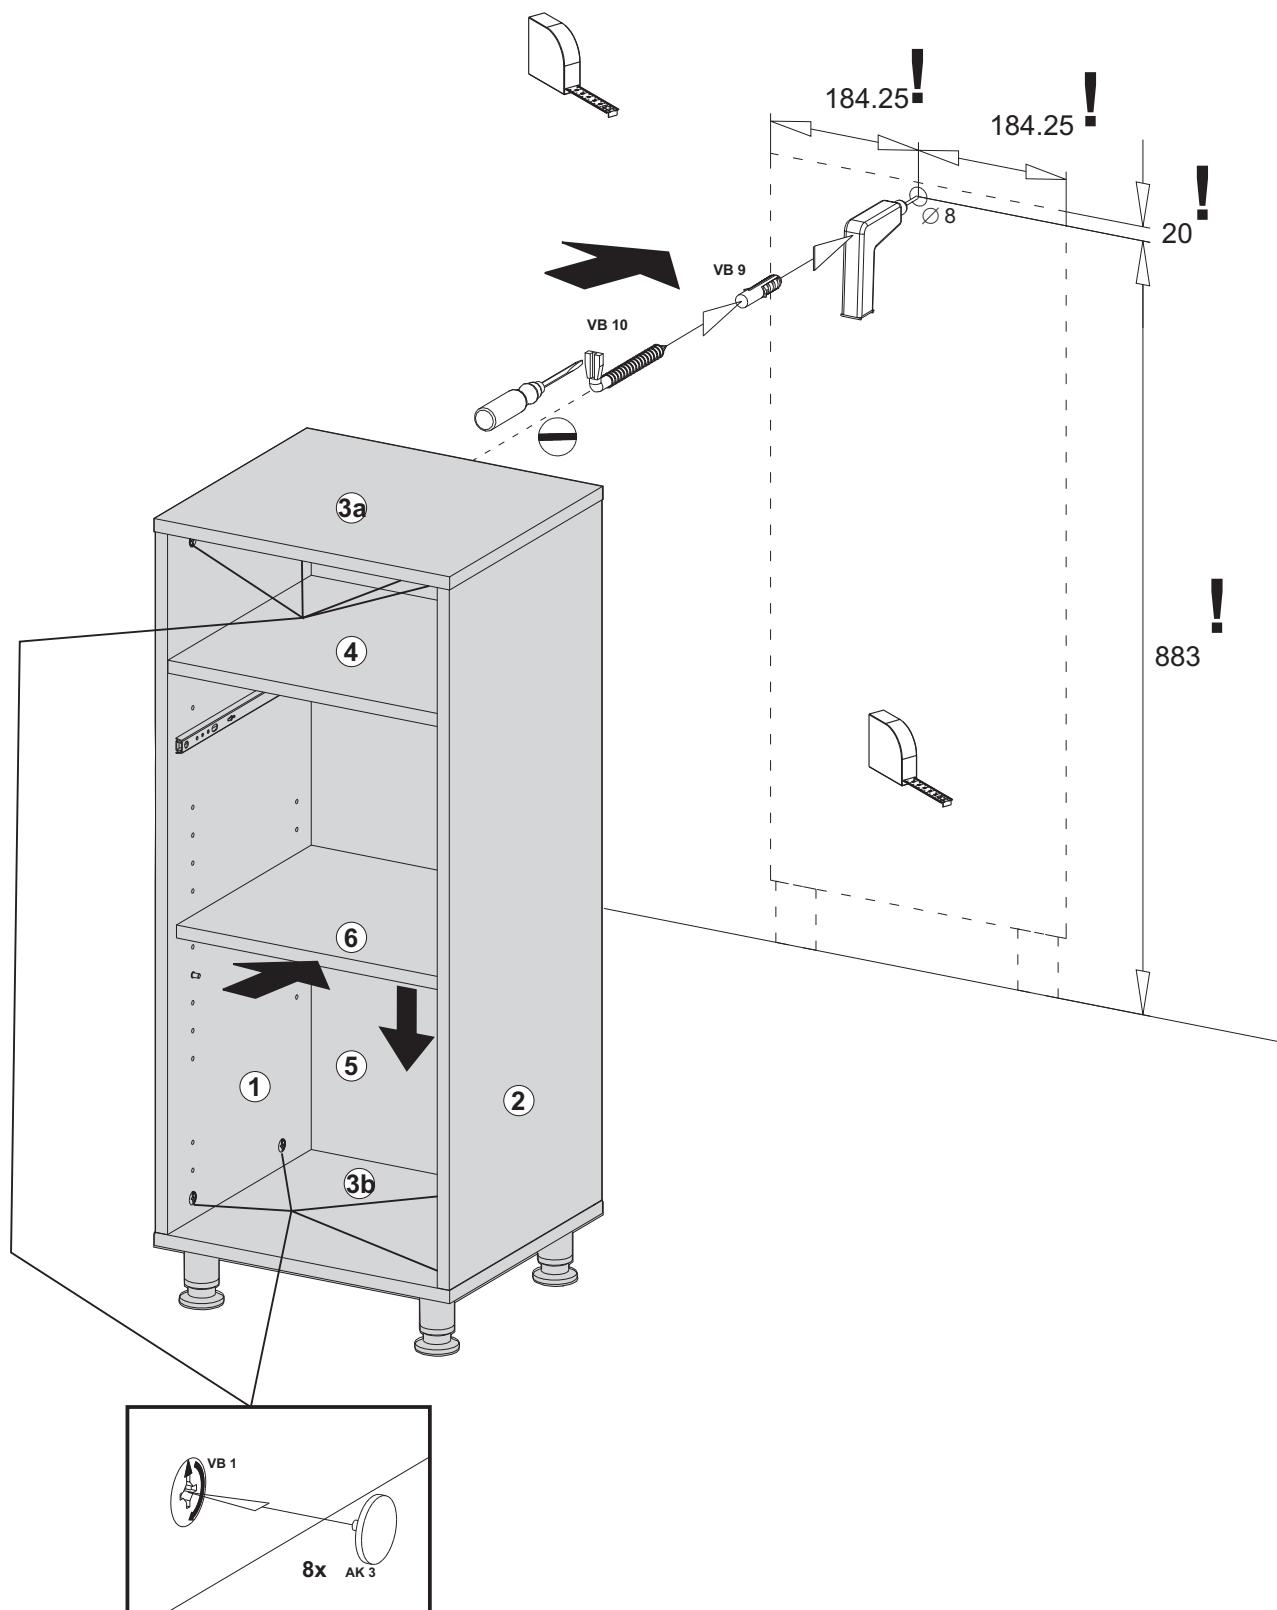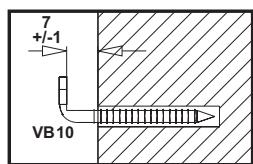F

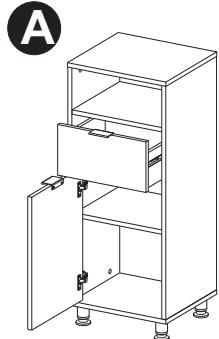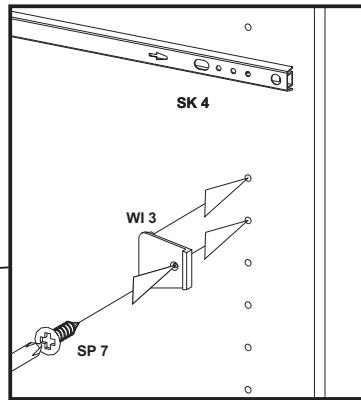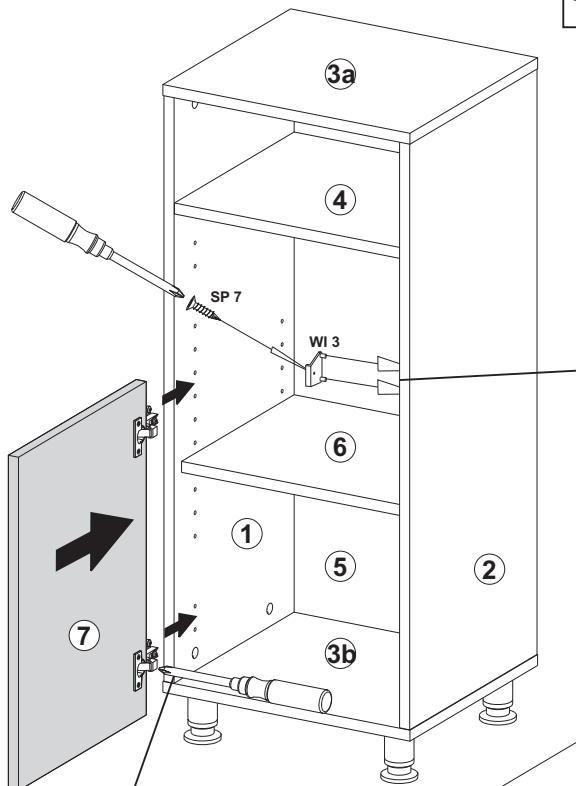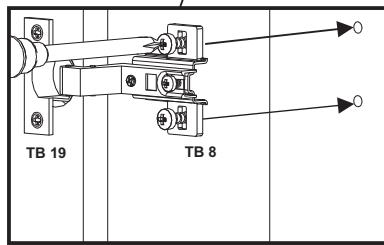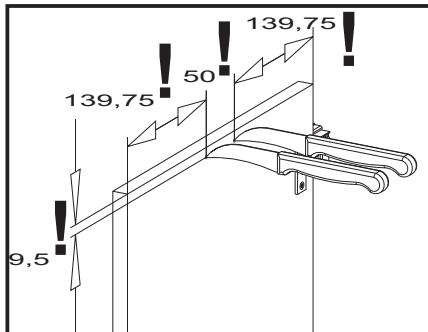G1**1****2**

129,75

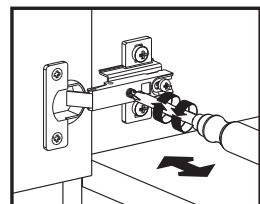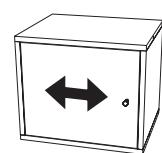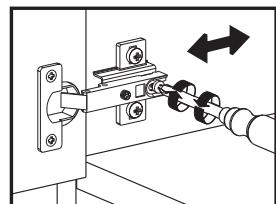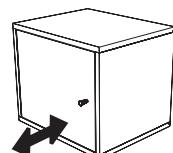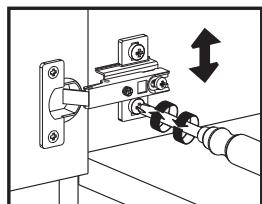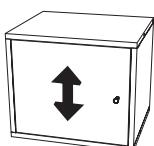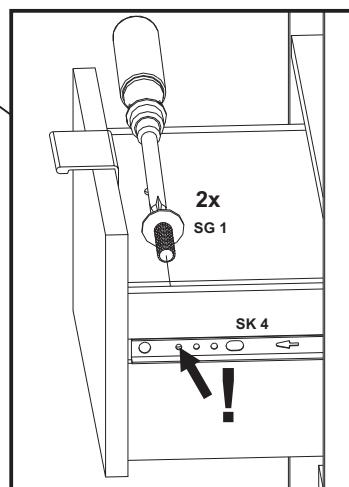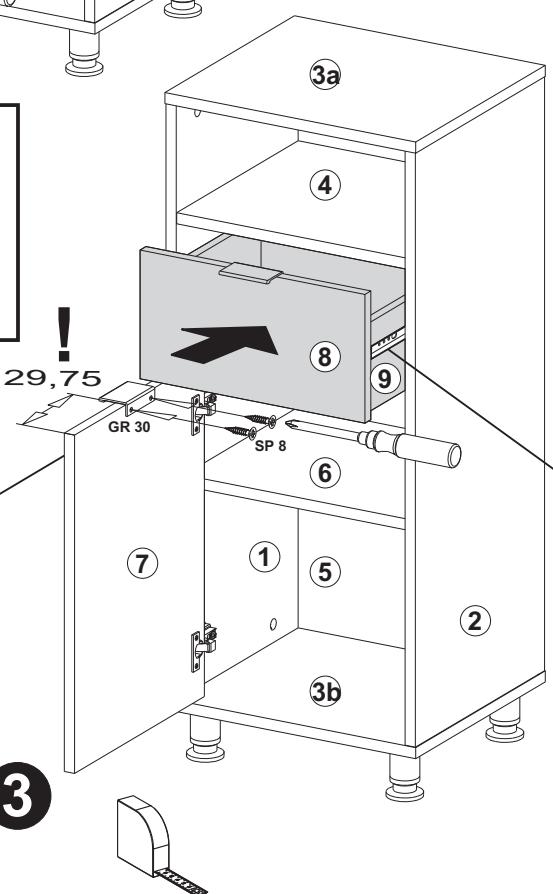3

G2**B**